

Installation & User Guide

PH High Pressure Piston Pumps designed for Industrial Area.

INSTALLATION

- Remove the protective covers off the inlet and output ports when connecting tubes or hosing.
- Rinse the tank and the tubes or hoses well to remove any possible contaminants.
- Before connecting up the pump inlet port, fill the tank and allow the oil to flow into a receptacle. This oil can be re-used after proper filtration.

OIL SUPPLY

Oil and supply line should be clean, and the supply line is airtight.

SUCTION LINE

Connect the suction line, tighten the suction connection bolts in diametric pairs. Connect the pressure line.

REPAIR

We offers a comprehensive range of services for the repair of our Piston Pumps. Repairs to the PH High Pressure Pump may only be performed by authorized, skilled and instructed personnel. Only use original and pre-installed our PH spare parts from supplied to Manufacturer..

Tested and pre-installed PH pumps successful repair requiring only little time.

SPARE PARTS

The spare parts list and the PH pump order specific.

When ordering spare parts, quote the material and complete Ordering code number of the PH Piston Pump as well as the right numbers of the spare parts.

RISK OF DAMAGE!

Do not touch the drive shaft of the PH Piston Pump
Do not touch sensor, valves and fittings
Do not touch sealing surfaces.

DIMENSIONS & WEIGHTS

		02	04	06	12	15	22	35	45
- Without inlet fitting	kg	5,50	5,50	5,50	8,00	8,00	8,00	12,00	12,00
- With inlet fitting	kg	5,60	5,60	5,60	8,15	8,15	8,15	12,25	12,25

Address all questions regarding spare parts to your responsible Our Service Partner or the technical service department of the manufacture's plant / factory for the PH Piston Pumps.

ÇELEBİ HİDROCEL OTOM. SAN. TİC. LTD. ŞTİ.

Fevziçakmak mh. Aslım Cd. No: 53 C Karatay / KONYA
Phone : +90 (332) 345 13 70 - +90 (332) 345 13 71
hidrocel@hidrocel.com.tr

AVAILABLE VIA E-MAIL ON REQUEST OR EACH PUMP IS SUPPLIED VIA STARTING AND INSTALLATION DATASHEETS